

Wiegand Access Controller User Manual



Contents

1.	PRODUCT OVERVIEW	1
2.	CONTROLLER INTERFACE DESCRIPZON	2
3.	SYSTEM WIRING REFERENCES	4
4.	MULTI-DOOR CONTROLL FUNCTION DESCRIPTION	5
5.	MULTI-DOOR CONTROLL CONFIGURATION	7

1. Product Overview

Parameter:

Input	DC12V/500MA
Working mode	networked, offline multi-mode selectable Card
issuing mode	management platform card issuing
Card capacity	40000
Password capacity	20000
Working temperature	-20°C~-70°C
Relative humidity	20%~93%
size	162*105*38.5mm

2. Controller interface descripZon



Interface descripZon:

Interface Name	Function Description	Remarks	Interface Name	Function Description	Remarks
+12V	DV12V power input		GND	groud	
12V	Wegen Readhead Power Supply		ALARM	Firefighting linkage signal	
GND	Wegen Reading Headland		NO	Relays normally open	Total of
D1	Wegen Readhead D1	Total of 4	COM	Relay Common	4 signals
DO	Wegen Readhead D0	signals for 4 readheads	NC	Relay normally closed terminal	for 4 locks
LED	Indicator Synchronization signal				

	- 9				
EXITx	Exit button signal	Total of 4	DSWx	Door magnetic detection signal	Total of 4
GND	Go out button ground	4 gates	GND	Magnetic door detection ground	for 4 gates
SW1 dip	switch: (dip code c	loes not dial r	neans 0, dip co	de dial to ON m	neans 1)
	00: TCF	P/IP LAN netw	orking 01: Offli	ne	

Wiegand Access Controller User Manual

3. System wiring references



4. Multi-door Controll Function Description

Switch Setting:



Startup status:

TCP/IP LAN networking : When the power is on, the blue LED flashes, indicating that it is looking for the network. When normally connected to the network, the buzzer "tick ~ tick" two short beeps, the LED red light is always on, indicating that the cloud access control has started normally; when 20 seconds later is not normally connected to the network, the buzzer "tick tick tick" three beeps, the LED red light is always on, indicating Connection network failure, the controller forced to start. After the controller is normally connected to the network, the LED green light will flash once every 20 seconds, indicating that there is data and the cloud platform interactive communication.

Offline working: When the power is started, the buzzer "beep" a short beep, the LED red light is always on, indicating that the cloud

access control has started normally.

Unlock status:

When the lock is opened legally, the buzzer of the controller and the reading head will be "beep" at the same time, accompanied by a green LED flashing once, and the corresponding relay will be jumped, which means that the lock is opened successfully; when the lock is opened illegally, the buzzer of the controller and the reading head will be "beep beep beep" three times at the same time, accompanied by a red LED flashing three times, which means that the lock is opened and failed.

Unlock method:

The device can be unlocked by swipe card, remote APP, out door button, management center platform remote, cloud server platform remote, password (optional), and many other ways.

5. Multi-door Controll Configuration

Management Center Add Controller

Connect the controller to the PC with a network cable, open the controller management software, and click Add Controller by Search. At this time, the management software can automatically search for the multi–door controllers connected to the LAN and assign them to the corresponding IP. Then configure the controller to the corresponding area. Click to confirm that the controller can be bound to the corresponding regional access control.

Ad	d Found To Data	base	Search			Configure	Close
D	SN	IP	Mask	Gateway	PORT	MACAddr	PC IPAddress Note
	29374830982	191.897.1.1	255.255.0.0	192.168.1.1	6000	00-26-9E-26-87-8C	192.168.1.1

Add user and configure his permissions

In the management center, add users to configure the rights of the corresponding area controllers for them. After the configuration is completed, users can open the door in the room where these controllers are installed by swipe card, APP, password, etc. More detailed controller management and

X

×

Add user:

User

* User ID:	J03			
* Name:	Lucy			
Card NO:	989898			
Department:			~	Photo
Attendance	Access Co	ontról		
	Activate:	2023/01/12 14:55:	14 — 2028/12/13 14	:55:14 芭
	Pwd:	*****		

Configuration Permissions: J01.Lucy—Privileges

optional boors	3	Selected Doors	1
m001-01		»» m001-04	
m001-02			
m001-03		>	
		×	
		<	

